



昭和ミニラジカセ

TAKARA TOMY ARTS

*写真やイラストは、実際の商品とは多少異なる場合があります。
 ※単4形アルカリ乾電池3本使用(電池は別売りです。)
 REQUIRES 3 LR03("AAA" SIZE) BATTERIES (NOT INCLUDED)

Instruction Manual

Aged 15 and above

この度は、タカラトミーアーツ「昭和ミニラジカセ」をお買い上げいただきまして、誠にありがとうございます。
 ご使用前に、この取扱説明書をよくお読みください。また、読み終わった後は必ず保管しておいてください。

警告 (けいこく)

必ずお読みください。

●小部品があります。誤飲・窒息の危険がありますので、3才未満のお子様には絶対に与えないでください。

注意 (ちゅうい)

- 本商品は15才未満のお子様には適用しません。15才未満のお子様の場合は、保護者のもとでお使いください。
- 本商品は単4形アルカリ乾電池(3本)を使用します。(別売り) ●乾電池は飲み込むと危険です。お子様の手の届かない所に保管してください。また万一飲み込んだ場合にはすぐに医師に相談してください。《電池を誤使用すると発熱・破裂・液漏れの恐れがあります。下記に注意してください。》・二次電池(充電式電池)は、絶対に使用しないでください。・古い電池と新しい電池、いろいろな種類の電池を混ぜて使わないでください。・+- (プラスマイナス) を正しくセットしてください。・ご使用後は必ずスイッチを切り電池をはずしてください。はずした電池は、小さいお子様の手の届かないところに保管してください。・ショートさせたり充電、分解、加熱、火の中に入れてしないでください。・万一、電池からもれた液が目に入ったときはすぐに大量の水で洗い、医師に相談してください。皮膚や服に付いたときは水で洗ってください。・廃棄するときは、自治体の廃棄物処理の指示に従ってください。●先端が尖っている箇所がありますので、注意してください。●カセット収納部に指や髪の毛や衣類などをはさまないように注意してください。●思わぬ事故の恐れがありますので、ご使用後は3才未満のお子様の手の届かないところに保管してください。●安全のため、破損、変形したものを使用しないでください。

〈使用上の注意〉○ご使用前に、取扱説明書(本書)をよくお読みください。また、読み終わった後は必ず保管しておいてください。○ビニール袋は梱包材ですので開封後はすぐに捨ててください。○直射日光の当たる所、暖房器具の近くなど温度の高すぎる所、低すぎる所には置かないでください。○ぶつけたり、落としたりしないでください。○本商品は非防水のため絶対にぬらさないでください。

タカラトミーアーツでは「子どもたちに安全で楽しいおもちゃと夢を」を第一に考えております。そのため、常に製品に対し研究、改良を行っており、お買い上げ時期によって同一製品の中にも多少異なるものや、パッケージの写真やイラストなどと異なる場合がございますがご了承ください。製品につきましては、万全の注意をはらって製造に当たっておりますが、万一お気付きの点がございましたら下記までご連絡ください。


タカラトミーグループお客様相談室 おかけ間違いのないようご注意ください。
0570-041173
 電話受付時間 10~17時 月曜日~金曜日(土日・祝日を除く)
www.takaratomy-arts.co.jp/support.html
 発売元: 株式会社 タカラトミーアーツ
 〒124-8511 東京都葛飾区立石7-9-10

<材質表示>

- 本体(カセット収納部、ラジオ目盛を除く): ABS
- カセット、カセットケース、カセット収納部、ラジオ目盛: MABS
- ロッドアンテナ: ステンレス
- シール: 紙

●たのしいタカラトミーアーツの情報はインターネットで
www.takaratomy-arts.co.jp
 ©T-ARTS
 MADE IN CHINA

Contents

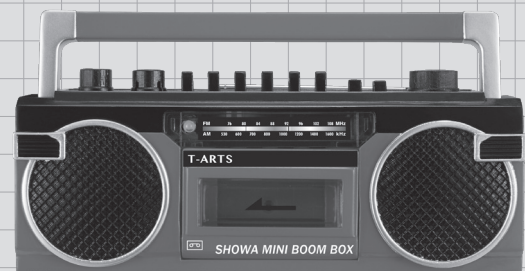

Radio Unit X 1



Cassette X 1



Cassette Storage Case X 1



Label Dticker X 1

Instruction Manual X 1



Name of Parts

- 1 Antena
- 2 Handle
- 3 LED
- 4 Cassette Bay
- 5 Power Switch
- 6 Volume Dial
- 7 Mic.
- 8 Tape Eject
- 9 Stop
- 10 Backward
- 11 Forward
- 12 Play
- 13 Record
- 14 Tape/Radio Switch
- 15 AM/FM Switch
- 16 Channel Dial

Front


側面

Top

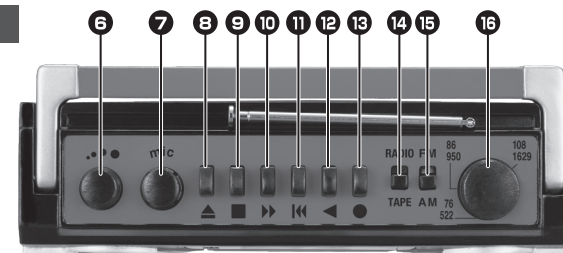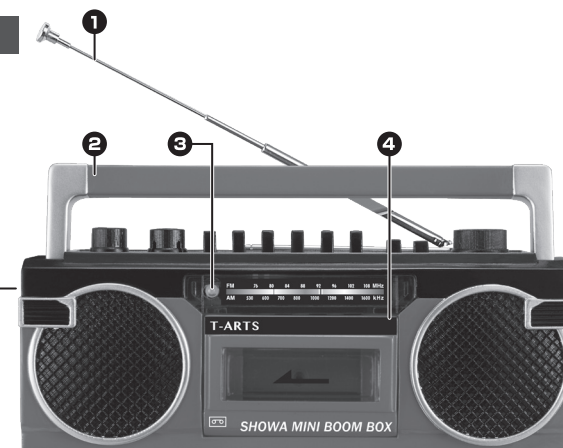

How to insert the battery

- 1 Open the Battery cover on the back side. Loosen the screws with screwdriver along the arrow mark.
- 2 Insert the battery with correct pole direction (+/-), Close the Battery cover lid and tighten the screws.

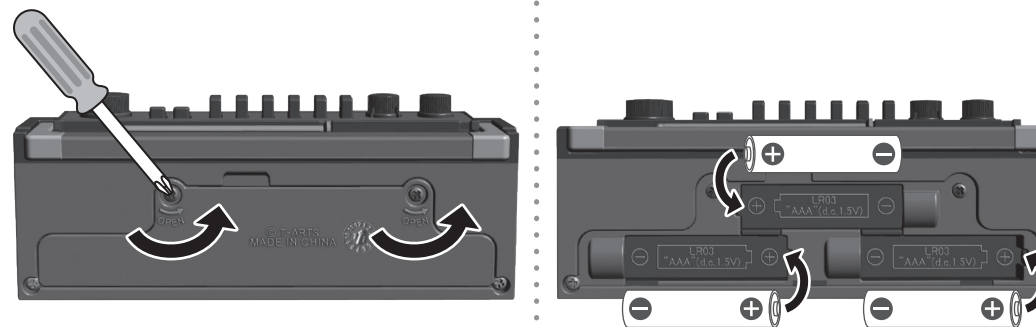


If you hear the noise or the volume has been decreased, please change the battery.

How to Use

Radio

In case of Poor Reception, please see the "How to make better reception" corner

- 1 Switch on the Power "ON" on the side of the radio and the LED lamp will lid on

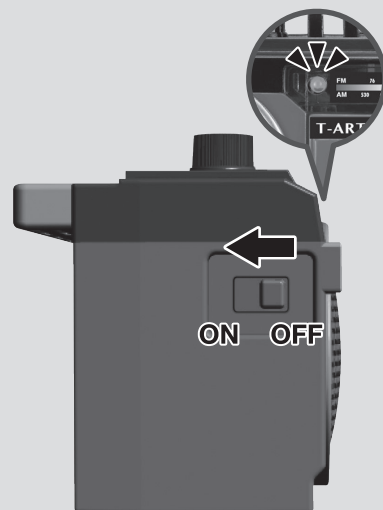

*Switch off the Power after using


- 2 Switch the correct side on both "Radio/Tape" and "FM/AM" switch, then twist the "Channel Dial" to your desired station



Please pull up the Antenna during receiving FM Channel,

* The Frequency marked on the Radio Unit is for reference only.

- 3 Twist the Dial to adjust the Volume

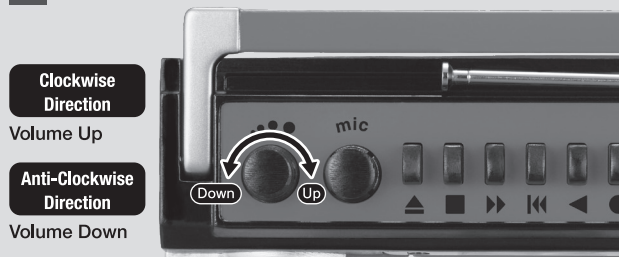

*If the Reception is poor, the volume cannot be increased even twisting the Dial. Please try again in other places with good condition

How to make better reception

- The Poor Reception may be resulted from inside the house or transportation. Better reception will be caused by putting the radio near to the window
- Please Do not put the radio near the devices which emitting Radio Waves (Television, Mobile Phone, PC...)

Please avoid Direct Sunlight



AM Band

Please adjust the placing direction until the reception becomes better



The Poor Reception of AM channel may be caused from inside the reinforced concrete Structure.

FM Band

Pull up to adjust the Length of Antena



Please Avoid to Pull up the Antena too hard or malfunction may be caused

Specifications


Frequencies Receivable: AM 522 - 1629 kHz, FM 76 - 108 MHz
Battery Life: Approximately 10 Hours (Alkaline Cell / Volume Max.)

Cassette


*The data is being recorded inside the Radio unit and the Tape is the "key" to activate the audio record/Play function only.
Data-recording function is not included in the Cassette Tape

Record

- 1 Each side (A Side/B Side)
Can record 1 data with maximum 5 mins

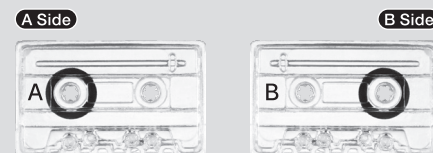

- 2 Press the "Tape Eject" Button and insert the tape in the Bay.
Place the side which you wish to record the data, facing yourself

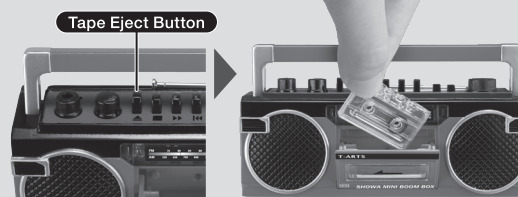


Play

- 1 Press the "Tape Eject" Button, insert the tape to the bay that the side which you wish to record the data face yourself



- 3 <Record from Radio Channel>
Can record the broadcasting contents in AM/FM Channel.
Make sure the broadcast is in good reception condition, press the "Record" button for 2 or more seconds to start recording.
Then, press the "Stop" Button when you want to stop recording

<Record from the mic.>
Switch the button to the "Tape" Side, press the "Record" button for 2 or more seconds to start recording.
Then, press the "Stop" Button when you want to stop the recording

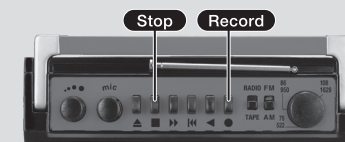


When LED changed from Lid on to blinking, recording starts.
The existing data will be covered by the new record during recording

- 2 Switch the button to the "Tape" Side, press the "Play" Button to play the audio being recorded



- 3 During playing the audio, below buttons can make different effects:

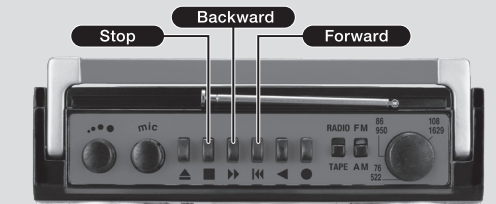

Stop Stop playing the audio. If press it one more time, the data will be played again in the position which being stopped.

Backward Roll back the data to initial position.

Forward Roll the data to the end. Will start from initial when pressing the "Play" button

- 4 The Cassette Tape can be stored in the storage Case.
You can stick the label sticker and write your favorite title on there

